



How to remove Magnavox MWD200F cover

This guide will show you how to take apart the device in order to complete maintenance repairs and cleaning.

Written By: Taryn





TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — How to remove Magnavox MWD200F cover



 
 
- Using a Philips screwdriver, remove the two screws on the top of the device, towards the back.

Step 2



- Remove the plastic cover by pulling up on the back and away from the faceplate.

Step 3

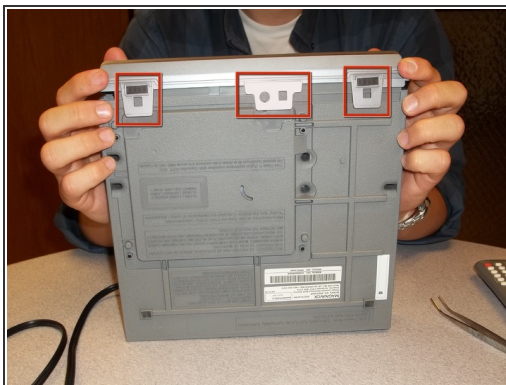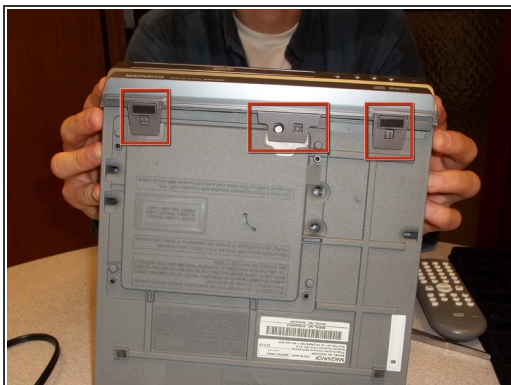

- Remove the face plate by unclipping the latches on the bottom of the device. Once it's unlatched, simply pull the face plate off.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 03:26:52 PM.